 
 

 


- Turns the power off.
- Decreases the volume.

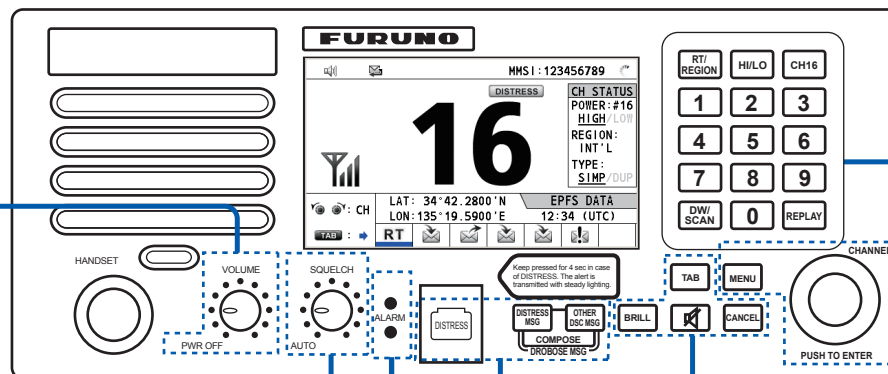

- Turns the power on.
- Increases the volume.



Rotate to adjust the squelch. AUTO position automatically reduces white noise.

Transmits the DISTRESS ALERT.
4 seconds

Composes DSC TX message for DISTRESS ALERT.

Composes DSC TX message except DISTRESS ALERT and DROBOSE.

Composes DSC TX message for DROBOSE (Distress Relay On Behalf Of Someone Else).
Press simultaneously

Adjusts the brilliance.

- Switches control to the tab area.
- Switches the session.

Turns the main speaker on/off.

- Cancels the creation of the DSC message currently being created.
- Silences the audio alarm.
- Erases error message or pop-up message.
- Returns previous layer in multi-layer menu.
- Erases character input.

- Switches to the RT (radiotelephone) screen.
- Opens/closes the option window for channel region.

Changes the output power to high (25 W) or low (1 W).

 
Switches to the RT screen and sets CH16.

- Enter alphabet, numeric or symbol.
- Direct selection of corresponding function on menu and applicable screens.

- Opens the option window for DW/SCAN.
- Cancels DW/SCAN in process.

Opens the replay screen.

Confirms a selection.




- Selects channel.
- Selects menu items or changes the page in multi-page screens.

Opens/closes the menu.

VHF radiotelephone communications



Sending distress alert

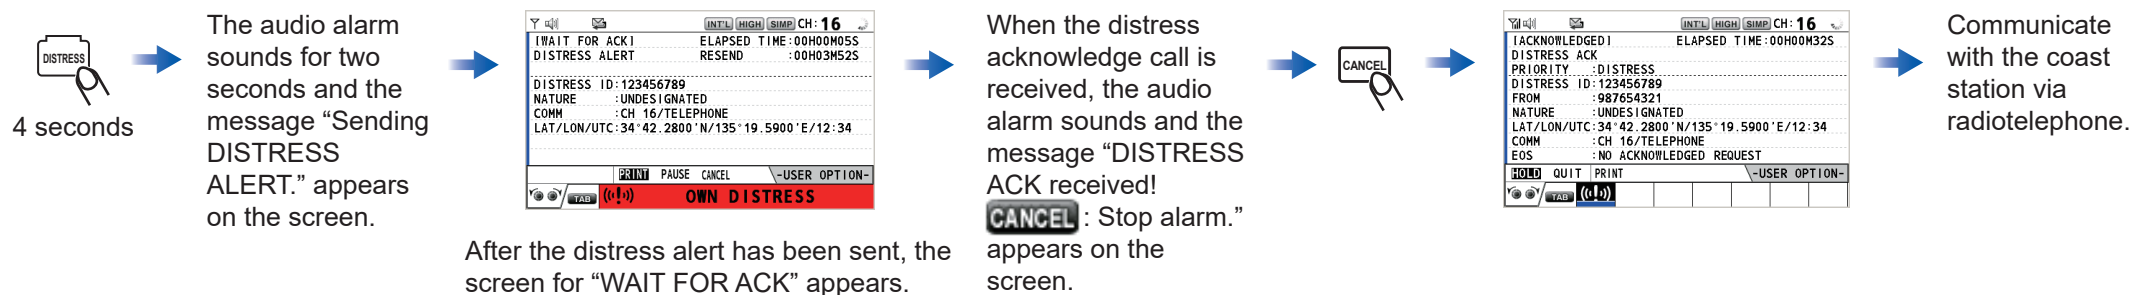

Sending an individual call (ROUTINE priority)

