

This datasheet provides information for replacement spares for the X2 VDR/S-VDR system.
The schedule shows product description, code or the spare and how often replacement is needed.

X2 VDR SYSTEM SPARES	CODE	OPERATIONAL LIFE
Float Free Capsule Hydrostatic Release Unit (HRU)	CAP-0005	Every 2 years
Fixed Capsule Acoustic Beacon Battery	BAT-0008	Every 3 years
Battery Backed Power Supply Batteries (2pcs)	BAT-0011	Every 4 years
Float Free Capsule	CAP-0002	Every 5 years
MEU Motherboard BIOS Battery	BAT-0001	Every 5 years
^A Main Electronic Unit storage: 1TB LTRM	STO-0008	Every 5 years
^A Main Electronic Unit storage: 32GB mSATA	STO-0012	Every 5 years
Main Electronic Unit (MEU) Fan	FAN-0005	Every 5 years
Fixed Capsule Acoustic Beacon	BEA-0001	Every 6 years

^A Recommended Spares for replacement; as advised the system Installation Manual

There is a VDR Maintenance/Engineer Kit available that allows you to extend the X2 System operational life.
This kit *does not* include any batteries.

X2 VDR MAINTENANCE/ENGINEER KIT	CODE	QTY
Main Electronic Unit (MEU) Fan	FAN-0005	1
X2 Main Electronic Unit Connector Kit	KIT-0031	1
X2 Outdoor Microphone	MIC-0011	2
X2 Indoor Microphone	MIC-0012	2

*This information is confidential and is intended solely for the use by the recipient.
Information should not be disclosed to 3rd parties in the form of copying or dissemination.*